

# 585 I AND 5853 DIAPHRAGM

## Cleaning Instructions




**NOTE:**

**DISCONNECT AND DRAIN ALL TUBING BEFORE PROCEEDING.**


**STEP 1:**

Remove 2 5/64 allen head screws retaining mounting bracket and diaphragm cover using a 5/64 allen key.

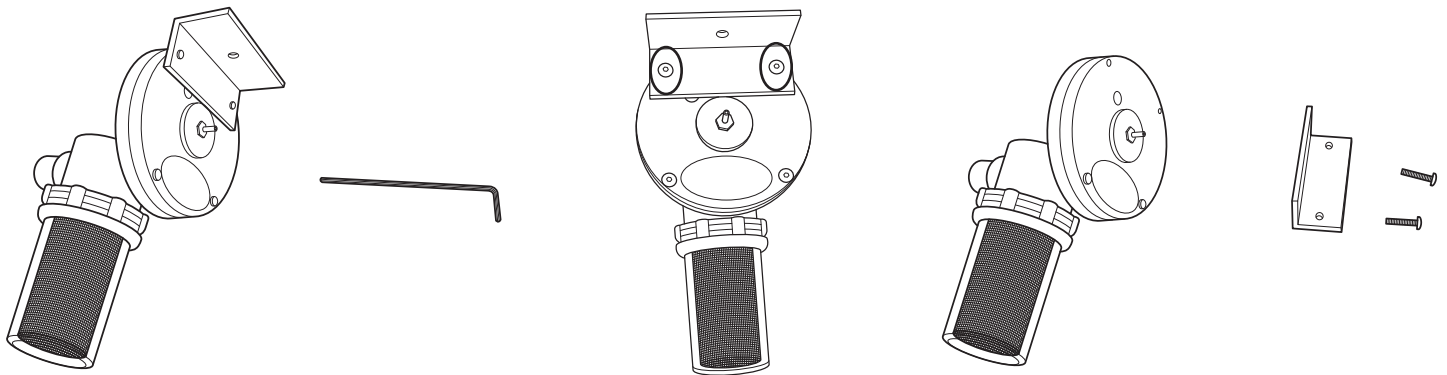


**STEP 2:**

Remove 2 5/64 allen head screws retaining diaphragm cover using a 5/64 allen key and remove cover.

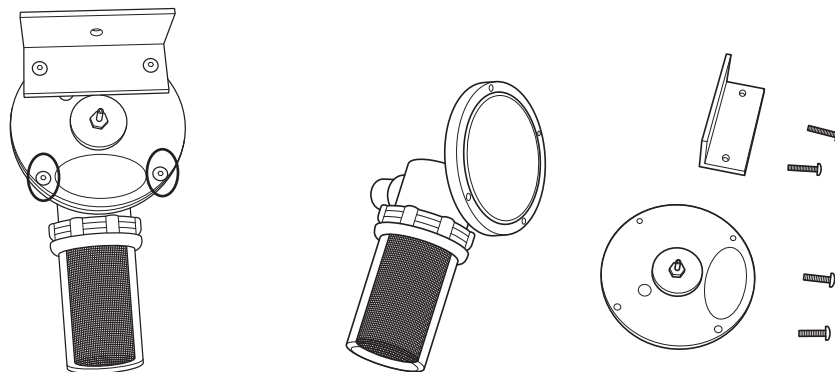


**STEP 3:**

Carefully remove orange diaphragm from housing – wipe any debris off of both sides of the diaphragm.

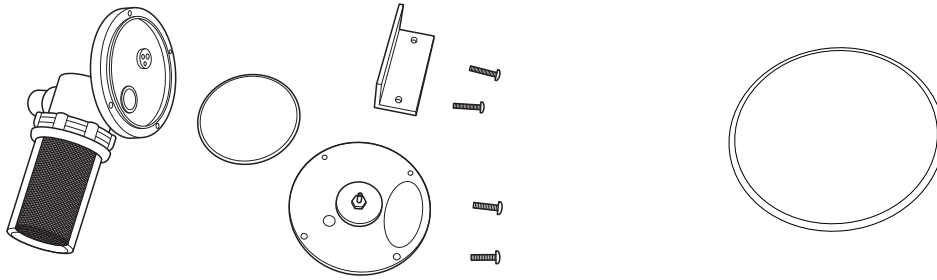

**STEP 4:**

Clean all debris from sealing surface on diaphragm housing.

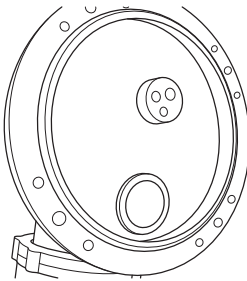


**STEP 5:**

Carefully replace diaphragm and orient diaphragm ridge into housing pocket. Replace cover and bottom 2 screws.



**STEP 6:**

Place last 2 screws and bracket into housing as shown.

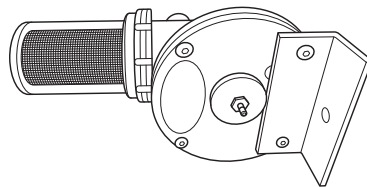

**STEP 7:**

Reinstall all tubings - valve is now ready for use.

