

# RELIANCE CABINET MOUNT MANUAL UNIT WITH ASSISTANT'S PACKAGE

## Instructions for Use



4521L

### GENERAL INFORMATION

#### APPLICABLE MODEL

4XXX

#### INTENDED APPLICATION AND USE

The dental delivery system is a device intended to support the instruments used by the dental practitioner, delivering those instruments to an accessible position during a dental procedure. This device may control and be the means of delivering compressed air, water, vacuum and low voltage electricity to a variety of instruments commonly used in dental practice.

### INSTALLATION INSTRUCTIONS

#### Package contains:

- Manual control dental delivery system with handpiece tubing and umbilical tubing
- Air/water syringe
- Wet/Dry foot control
- Syringe repair kit
- Assistant's vacuum package

#### Tools needed:

- 1/4" and 1/8" sleeve tool
- Screwdriver or other appropriate hand tool for wall fasteners

#### Instructions:

- 1. Cover:** Remove the screw retaining the cover to the chassis, located on the underside front using a 3/32" hex key. Lift cover up and remove from rear hinge.
- 2. Install vertical mount plate** (see Figure 1).
- 3. Install 8" and 6" rigid arms** (see Figure 2).
- 4. Install dental delivery system head and assistant package** (see Figure 3).
- 5. Umbilical tubing:** Umbilical tubing: Run dental delivery system umbilical tubings into junction box. Connect proper tubings:
  - 1/8" Red - Water supply
  - 1/8" Clear - Unregulated-Input air supply
  - 1/8" Yellow - Unregulated-Output air to shut-off blocks
  - 1/4" Gray - Regulated drive air/ air coolant
- 6. Water and Air Supply:** Open the manual shut-off valves in the utility center. Adjust regulated air to 80 psi and regulated water to 40 psi. When adjusting for a lower pressure, make the adjustment, and then press the syringe button to relieve the pressure to get an accurate pressure reading.

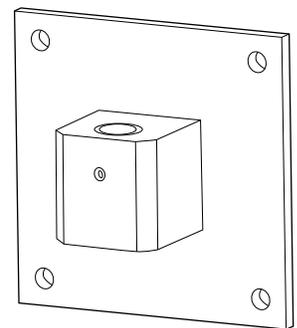


Figure 1

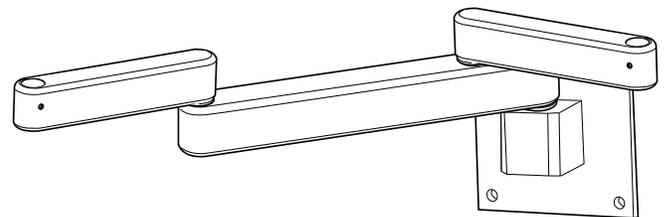


Figure 2

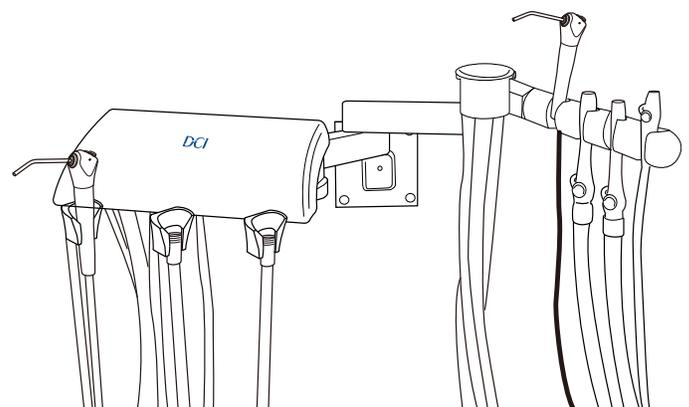


Figure 3

# OPERATING INSTRUCTIONS AND DENTAL DELIVERY SYSTEM FEATURES

## HANDPIECE HOLDERS

The handpiece holders are designed to resist chemical discoloration and be easy to clean.

## CONTROLS

The controls air and water to the entire system. It is located on the underside in the front on the far left. Water coolant is provided to handpiece #1 and #2. The is located on the underside of the dental delivery system on the left. The control water to handpiece #1 and #2 and are located on the underside of the control dental delivery system, near the back. The is located on the underside of the dental delivery system in between the handpiece tubing 1 and 2 - use this to toggle between handpiece #1 and handpiece #2. The indicates the operating pressure of the selected handpiece. It is located on the right side of the control dental delivery system chassis. The are located on the underside of the control dental delivery system, in the back. Handpiece drive air pressure should be adjusted to the handpiece manufacturer's recommendation (see Figure 4).


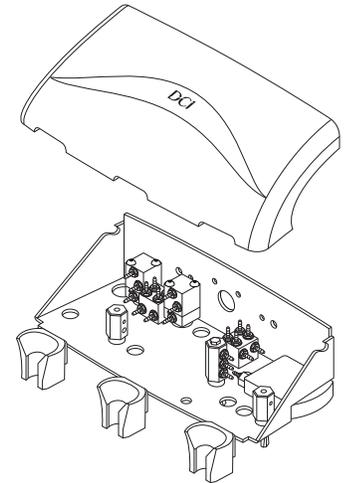


Figure 4


## SYRINGE

The 4521L comes with an air/water syringe. The syringe is packaged in a shipping envelope, with operating instructions and a repair kit attached. The syringe goes in the holder on the far left side of the instrument holder bar. Adjustment screws for the air and water flow to the syringe are located on the underside of the control dental delivery system, in the rear left area. Use the 3/32" hex driver provided with the dental delivery system to turn the hex screws counterclockwise to increase the flow of air or water, clockwise to decrease the flow.

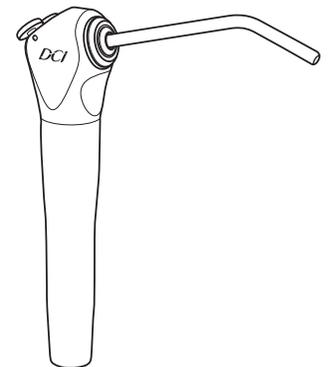

## FOOT CONTROL

Handpiece speed is controlled with the foot control disc. Varying pressure on the foot control disc controls speed. Air coolant is also provided when you step on the foot control.

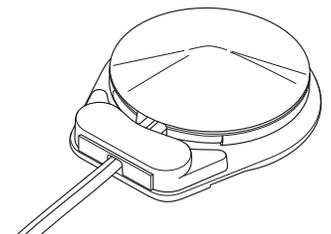

## CONTROL HEAD

The control head can be cleaned with most commonly available surface disinfectants. Do not use any Sodium Hypochloride solutions, or any cleansers containing alcohol. These may cause paint and finish discoloration.

## DENTAL DELIVERY SYSTEM WATER LINE MAINTENANCE

Distilled water is not recommended for use in dental delivery systems. The Center for Disease Control and the American Dental Association can provide recommendations on when to flush your system, for how long, and what products to use.

## CLEANING AND MAINTENANCE

Do not use powdered cleansers, scouring pads, or abrasive scrubbers on any of the finished metal surfaces in this dental delivery system, i.e., the syringe or the foot control disc. Sodium Hypochloride will also damage these surfaces.

