



Removal

Use a pick or pointed utensil to remove the bulb/adaptor by catching the dimple on the side of the bulb or by lifting from under the bulb.

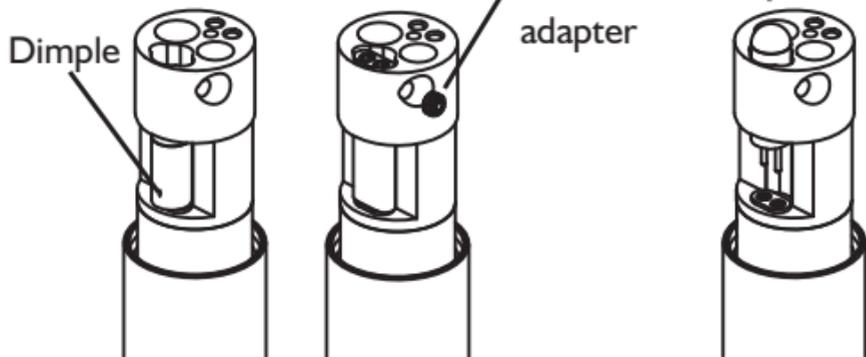

9395
LED Bulb

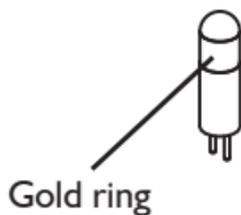


9499 5-Hole to
6-Pin Adapter



Note: A genuine DCI LED bulb can be identified by a gold ring around the tip of the bulb.

Installation

Insert bulb 9395 or adapter 9499 through the opening and press firmly so there is no space below the bulb/adapter and the pins are not visible.

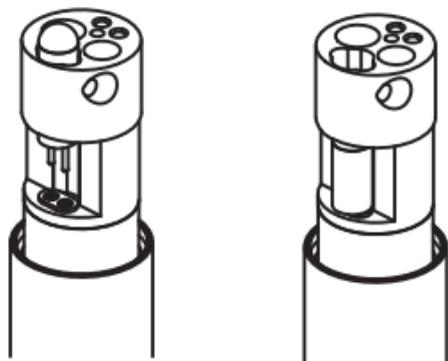

If the LED does not illuminate when activated remove bulb, rotate 180°, and re-install.



Tighten set screw for 9499 adapter

